




**VISTA
PROFESSIONAL
OUTDOOR
LIGHTING**

INSTALLATION INSTRUCTIONS

STM-218

ACCESSORIES

Stanchion Mount

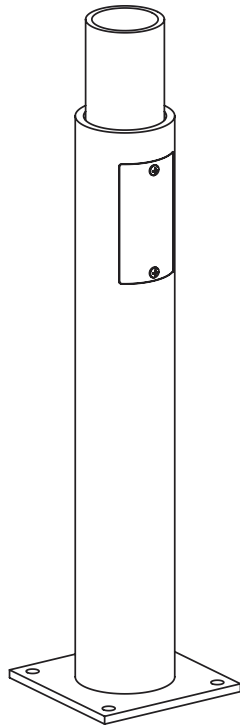

WARNING: Junction boxes must be installed in accordance with the National Electrical Code (NEC) and local codes. Failure to do so will void the warranty and may result in serious injury and/or damage to the luminaire.

NOTE: Always use UL recognized wire connectors for connections.

NOTE: Save these instructions for future reference.

STANCHION MOUNT INSTALLATION:

1. Be sure power is turned off and that fixture voltage matches supply voltage.
2. Remove splice cover.
3. Feed fixture leads into top of stanchion. Attach fixture to stanchion top using the CTM-200 Mounting Cap (not included).
4. Make electrical connections in accordance with National Electric Code, making sure Ground Wire is properly secured.
5. Adjust fixture to desired direction. Tuck wiring into splice compartment.
6. Replace splice access cover with screws provided.
7. Secure stanchion to desired horizontal surface with four fasteners (fasteners by others). Holes in base flange for mounting are 7/16" dia. Bolt pattern is 3" sq.