

1051YM / 1052YM / 1054YM

ARCHITECTURAL SERIES

Linear LED Floodlight - Yoke Mount

INSTALLATION INSTRUCTIONS

IMPORTANT NOTE:

- Luminaire must be installed and grounded in accordance with the National Electrical Code (NEC) and local codes.
- Luminaire is UL listed for above grade installation only.
- Always use UL recognized wire connectors for connections.


MAINTENANCE: To assure proper operation and efficiency, lens must be kept clean and free of dirt, dust, leaves, trash and mineral deposits from water. A regular scheduled maintenance program is recommended.

SAFETY WARNING: Luminaire can become hot. Take care when locating luminaires.

NOTE: Save these instructions for future reference.

LUMINAIRE MOUNTING (YOKE) TO JUNCTION BOX(ES):

- 1. Make sure electrical supply is off at circuit breaker before starting luminaire installation or servicing luminaire.
- Thread Luminaire Supply Conductor cable through the Cord Seal, the Yoke Mount Bushing (ordered separately) through Yoke center hole and into Junction Box Ld. Tighten the Yoke Mount Bushing fully.
- 3. Route luminaire supply conductors into wet location rated J-Box (by others). Attach conduit supply conductors (by others) to the luminaire conductors observing polarity, line to black, neutral to white, and ground to green. Connect the supply / luminaire conductors using approved wiring methods.
- 4. Secure the Junction Box Lid onto the Junction Box using the Junction Box Lid Screws. Tighten.
- Adjust the aim of the fixture and firmly re-tighten the Yoke Aiming Hex Nut(s) underneath the Yoke Decorative Caps.
- 6. Re-assemble the Decorative Caps onto the Yoke.
- 7. Tighten the Yoke Locking Set Screws to secure the aiming.
- 8. Supply power to the luminaire and check for proper operation.

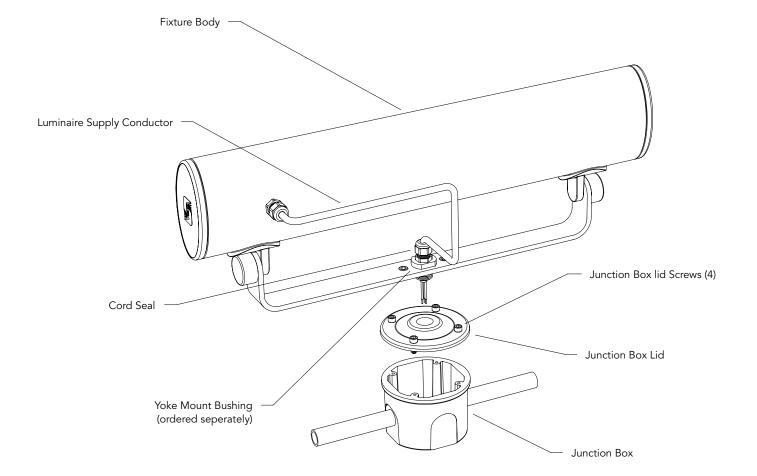

Vista Professional Outdoor Lighting reserves the right to modify the design and/or construction of the fixture shown without further notification.